MANUAL

INFORMATION 1


- Size 2.8inch 61.44(H) X 34.32(V)mm
- Resolution 320 x 240 (16 : 9)
- Display Colors 16.7M
- Luminance of white 300 cd/m2
- Pixel Pitch 0.192(H) X 0.143(V)
- INPUT SDI 1Channel SD-SDI(270Mdps), HD-SDI(1.485Mdps), 3G-SDI(2.970Mdps)

Audio Input Embedded Audio

- Audio Ouput Analog Stereo (Earphone Jack 3.50) /Internal Mono (L)Speaker
- Accessory USB Cable/ DC USB Adaptor/ Sub Battery(option)
- Charging via USB to computer system of power adaptor.
- Operation time Up to 2 hours on HD-SDI
- Power Consumption < 3.5Watts(Typ.)</p>

SDI Input Signal Format

- SMPTE 425M A/B 1080p (60/59.94/50) - SMPTE 274M 1080i (60/59,94/50)/1080p (30/25/24)/1080Psf(30/25/24) - SMPTE 296M 720p (60/59.94/50/30/25/24) - SMPTE-125M 480i (59.94) - ITU-R.BT.656 576i (50)

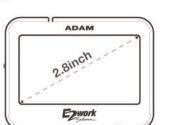

CAUTION 1

- It is highly recommended to read and understand the cautions listed below thoroughly before you start using the product. And if you are unclear with any parts of the cautions or have questions, please contact us.
- All operating instructions must be read and understood before the product is used.
- These safety and operating instructions must be kept in a safe place for future reference.
- Do not use any attachments not included with the product or not recommended by the manufacturer.
- This product must be connected to a power source specified on the specification label. If you are not sure of the type of the power supply used at your location, please consult with your dealer or local power company.
- The power cords must be routed properly to prevent heavy weights on top of them from any objects. Check the cords connected to the plugs and product.
- Never insert an object into the product through vents or openings. There is high voltage flow in the product and inserting any objects can cause electric shock and/or short internal parts. For same reason, do not spill water or liquid on the product.
- In any cases, do not attempt to repair the product by yourself. Removing covers can expose you to high voltage and other dangerous conditions. Contact specialized electricians for all repairs.
- Keep the product away from heat sources such as radiators, heaters, stoves and other heat generating products(including amplifiers).
- Allow minimum 10cm gap all around the product for easy install/uninstall.

CAUTION 2

- If any of the following conditions occurs, unplug the power cord from the AC outlet and request a gualified specialist for repairs.
 - When the power cord or plug is damaged.
 - When liquid was spilled on the product or objects have fallen onto the product.
 - When the product has been exposed to rain or water.

When the product does not operate properly as described in the operating instructions. Do not touch the controls other than those described in the operating instructions, Improper adjustment of controls not described in the instructions can cause damages, which often requires extensive adjustment work by a qualified technician.


When the product has been dropped or damaged.


When the product displays abnormal condition. Any noticeable abnormality of the product requires serv

- Unplug the power cord from the AC outlet before cleaning the product. Use a damp cloth to clean the product Do not use liquid cleaners or aerosol cleaners.
- Keep the product away from direct Sun light.
- Do not place the product on top of unstable bases such as cart, stand, tripod or table. Products may fall resulting in serious personal injuries as well as damages to the product. Use only a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. When mounting the product on the wall, be sure to follow the manufacturer's instruction. Use only the mounting hardware recommended by the manufacturer. The vents and other openings in the cabinet are designed for ventilation. Do not cover or block these vents and openings as insufficient ventilation can cause overheating and/or shorten the life of the product. Do not place the product in a closed place suc as a bookcase or rack, unless proper ventilation is provided or the manufacturer's instructions are followed.
- The LCD panel used in this product is made of glass. Therefore, it can break when the product is dropped or exposed to impact.

OSD MENU

- Volume Adjust the Volume of the screen. 8 BRIGHTNESS Adjust the brightness of the screen.
- CONTRAST Adjust the contrast of the screen.
- CHROMA Adjust the CHROMA of the screen.
- AUDIO METER Adjust the audio meter ON/OFF.
- SMPTE 425M LEVEL Adjust the Level A or B.
- □ MENU Button 의 기능 1 MENU OPEN
- 2 BATTERY Condition Push MENU Button to check battery conditon 3 DPMS Mode OFF Push long MENU Button to OFF DPMS Mode
- Power ON/OFF LED RED : No signal or Unrecognizable video signal GREN : Video signal detected

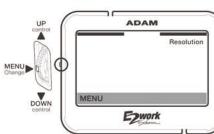

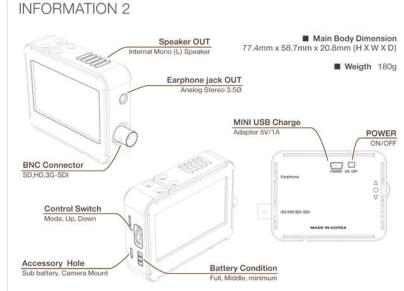

	memo	
Coutlet and request a qualified		
product.		
ating instructions. Do not touch the oper adjustment of controls not s extensive adjustment work by a		
nality of the product requires service.		
a damp cloth to clean the product.		
Id or table. o the product. cturer or sold with the product. s instruction. ants and other openings in the openings as insufficient ventilation the product in a closed place such turer's instructions are followed. c when the product is dropped or	[133-834] #909 seongsu APEX CENTER, 18, Achasa	ın-ro 7na-gil, Seongdong-gu, Seoul, Korea TEL. +82-2-460-8431 FAX. +82-2-460-8432 URL. www.e2work.co.kr
Battery Condition Show Battery remains (100%, 50%, 20%) When battery remains become less than 1%, automatically turn off. Reset Button	Accessory Rack Type 4 monitor Braket (2RU)	SUB Battery
Power ON/OFF LED RED : No signal or	(c)	E
Unrecognizable video signal GREN : Video signal detected	USB Adaptor	
	DC 5V/1A If you use monitor while charging battery, charging will be slow.	 Camera Mount Braket TBD
Resolution	The adapter will be changeable without notice.	155
	USB Cable	Manual
Epwork		